

GUARDALL SAFE AND LOCK

TEL. 1300 1 SAFES (1300 1 72337)

GS SERIES OPERATING INSTRUCTIONS

1. TO OPEN THE SAFE

- a. Enter the code (the factory setting is 1,5,9) and press A or B.
The green LED will come on to accept the code, you then turn the knob (if there is a handle, turn it also) and open the safe.
- b. If incorrect code is entered the yellow LED will flash along with a series of beeps. When incorrect code is entered three times, the keypad will shut down for five minutes.

2. TO LOCK THE SAFE

Close the door and turn knob (if there is a handle, turn it also).
Always check the safe is locked.

3. TO CHANGE COMBINATION CODE

WARNING: ALWAYS CHANGE CODE WITH DOOR OPEN

With door open, press red button located at the rear inside of the door. The yellow LED will come on. Enter your new code (using 3-8 digits) followed by A or B.
Test new code to confirm before closing and locking the safe.


4. TO OPEN SAFE IN EMERGENCY

In the event of "lockout", the safe can be opened with the override key. Slide out the battery compartment cover and behind the battery holder is the keyhole.

DO NOT KEEP OVERRIDE KEY IN THE SAFE

5. CHANGING THE BATTERIES

When the batteries are low, the red LED will come on to give you a warning.
Replace the four AA size batteries with alkaline batteries and the safe will return to normal operation.
Your code remains in the memory

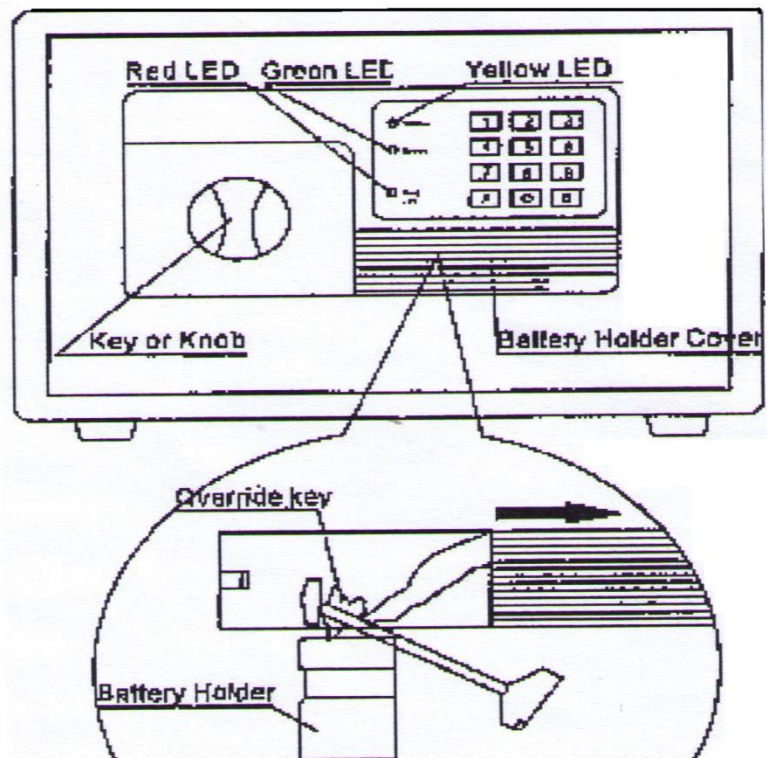

NOTE: Always have the safe door in the open position when following the code changing procedure.

Always double check the new code has entered correctly before locking the safe door.